

1. Open the bag by use of the zipper



2. Take out the roll-banner cassette



Take out the pole




4. Turn the foot into the fixation



5. Put the cassette on the floor



6. Assemble the pole

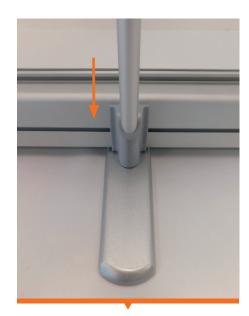

7. Put the pole in the pole locator of the cassette



8. While holding the pole, pull the print by its top rail



Lean back to prevent pole bending. Connect the top part of the pole into the top rail.