

SMALL INVITATION STATION

HARDWARE & INSTALLATION INSTRUCTIONS



 
WHAT'S INCLUDED:

Your Small Invitation Station Stand includes everything needed for quick and easy setup:

- (1) InfoSign Stand with telescoping upright post and weighted base
- (1) Sign Frame designed to hold A4 signage (mounts vertically or horizontally)
- (1) Magnetic Clear Front Panel for securing printed signs inside the frame
- (1) Pack of (5) Printed A4 Signs
- (1) Small Acrylic Invite Card Holder
- Double-sided adhesive tape for attaching the acrylic holder

PRODUCT SPECIFICATIONS:

- **SIGN HOLDER SIZE: APPROX. 9.25" W X 12.5" H**
- **ADJUSTABLE HEIGHT RANGE: APPROX. 41.5" – 59"**
- **SIGN ORIENTATION: VERTICAL OR HORIZONTAL**
- **MATERIAL: STAINLESS STEEL STAND WITH ACRYLIC SIGN FRAME**

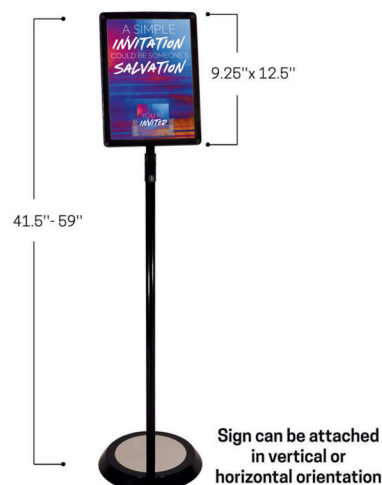

SMALL INVITATION STATION

HARDWARE & INSTALLATION INSTRUCTIONS CONTINUED



 
STEP 1

- Place the weighted base on a flat surface.
- Ensure the upright pole is fully inserted and secure by screwing the pole into the base.



STEP 2

- Loosen the height adjustment collar on the pole.
- Extend or lower the stand to your desired height, then tighten the collar to lock

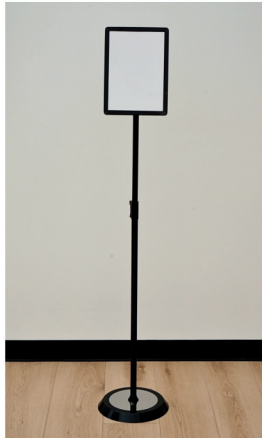


STEP 3

- Align the tilt-mount bracket on the back of the frame with the top of the pole.
- Slide the bracket onto the pole until snug.



STEP 4

 - Gently peel off protective film from the panel

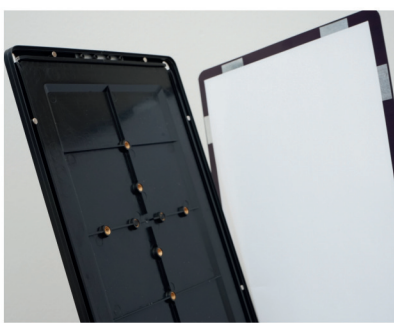

STEP 5

- Remove the magnetic clear front panel.
- Place your 9.25" x 12.5" sign inside the frame and replace the panel.



STEP 6

- slide panel with chosen graphic into panel

 
ACRYLIC INVITE CARD HOLDER

INSTALLATION INSTRUCTIONS CONTINUED



STEP 1

- Decide where you would like the acrylic holder mounted on the front of the stand or sign frame.
- Make sure the surface is clean, dry, and free of dust.

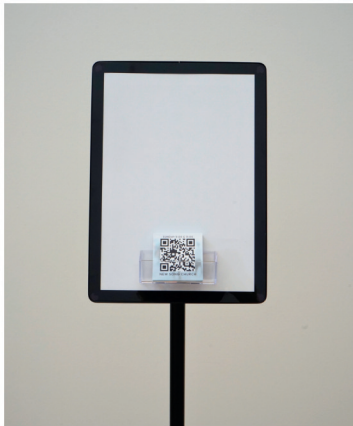

STEP 3

 
- Align the holder carefully in your chosen position.
- Press firmly against the stand or frame for several seconds to ensure a secure bond.

**Allow adhesive to set briefly before use.*



STEP 2

- Remove the backing from the included double-sided adhesive strips.
- Apply the adhesive firmly to the back of the acrylic holder.

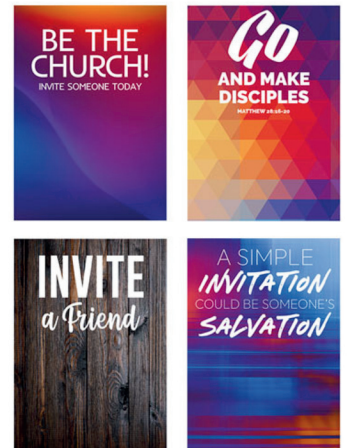

5 printed signs included