

# WALL MOUNTED QUICK CHANGE FRAME

## Hardware and Installation Instructions

\*Recommended 2+ people for assembly and hanging



### WALL FRAMES INCLUDE:

- Aluminum Frame Bars
  - 6'x4' = 6 frame pieces / (1) 4' center bar piece
  - 6'x8' = 8 frame pieces / (2) 3' center bar pieces = 1 assembled 6' bar
  - 6'x12' = 10 frame pieces / (2) 3' center bar pieces = 1 assembled 6' bar
  - 6'x16' = 12 frame pieces / (4) 3' center bar pieces = 2 assembled 6' bars
- Metal edge and corner connecting pieces, center bar connector, screws, Star Head screwdriver
- Not included but needed: Standard size Phillips head screwdriver, metal drywall anchors and screws



# WALL FRAME ASSEMBLY STEPS:



## STEP 1.

Lay out all edge pieces to form a rectangle using the matching shapes as a guide. Once established, flip each frame piece over to see backside of wall frame



## STEP 2.

Slide metal edge connector piece into one side of edge bar. There should be 2 screw holes showing on either side of the edge pieces




## STEP 3:

Use Phillips screwdriver with 4 screws to tighten metal pieces into the edge bars. Hand tighten only, drill not needed. Tighten 2 screws on each side of frame pieces.





## STEP 4.

Repeat this process for all edge and corner connecting pieces and bars.

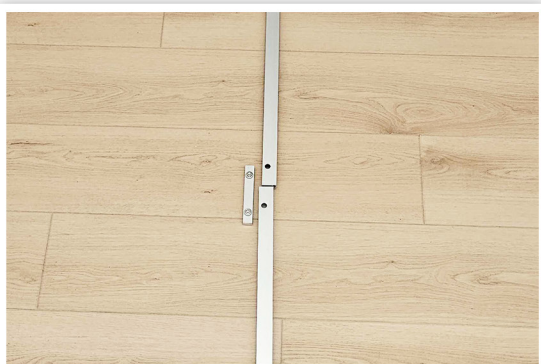

## STEP 5:


Once the outer edge is fully connected, lay either 1 or 2 center bars together vertically in the middle of the frame. The ends with screw holes will be together in the middle.

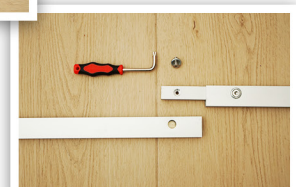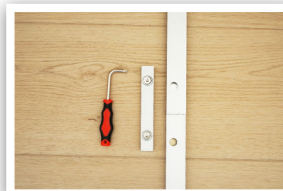

## STEP 6.

Insert metal connector piece into one side of the center bar, tighten with included star head screwdriver. Stick the other end in the other center bar and tighten.

## WALL FRAME ASSEMBLY STEPS (CONT'D):

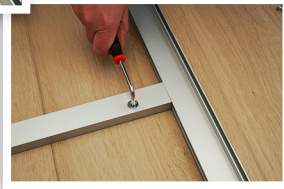

### STEP 7.

From an angle, slide in the end of the center bar into the horizontal edge frame piece, use the star head screwdriver to tighten. Repeat on other end of center bar.



### STEP 8.

The frame is now assembled. Turn the frame back over so you can see the shapes - this is the SEG Panel side of the hardware. Remove outer protective film from outside frame pieces once assembled.

## SEG PANEL INSTALLATION:



### STEP 1.

To insert your SEG Panel into the frame, start at one corner. Insert the edge of the silicone "strip" into the outer rim of the frame so the stitches will not be seen.

### STEP 2.

Continue pushing the silicone strip along the frame. The Panel will stretch to fit the frame without any wrinkles.



### STEP 3.

When changing to a new Panel simply pull the corner of the Panel out of the frame and then proceed to remove it.



# HANGING WALL FRAME:

## STEP 1.

Use included mounting hardware to attach to the wall with a drill. **(NOTE: Screws & drywall anchors not included. #6 Metal Drywall Anchors and screws recommended).**



## STEP 2.

Recommend installing mounting hardware every 2 feet. Use a level to help maintain straight mounting.

# FINISHED ASSEMBLY

