

PORTABLE COUNTER SMALL OVAL

HARDWARE & INSTALLATION INSTRUCTIONS




WHAT'S INCLUDED:

- (1) 23.5" WIDE BLACK LAMINATED OVAL COUNTERTOP
- (1) 15.5" WIDE SILVER OVAL BASE PANEL WITH CUT-OUT HANDLES
- (6) LEG PIECES – TOP & BOTTOM SECTIONS
 - (3) TOP POLE PIECES
 - (3) BOTTOM POLE PIECES
- EACH POLE FEATURES A BUILT-IN SCREW CONNECTOR FOR FASTENING TO THE COUNTERTOP
- ALL POLES ARE TELESCOPING AND PRESS-FIT — NO TOOLS REQUIRED
- NYLON CARRYING CASE

PRODUCT SPECIFICATIONS

- ASSEMBLED SIZE: APPROX. 23.5" L X 40" H X 15.5" W
- WEIGHT: 13.2 LBS

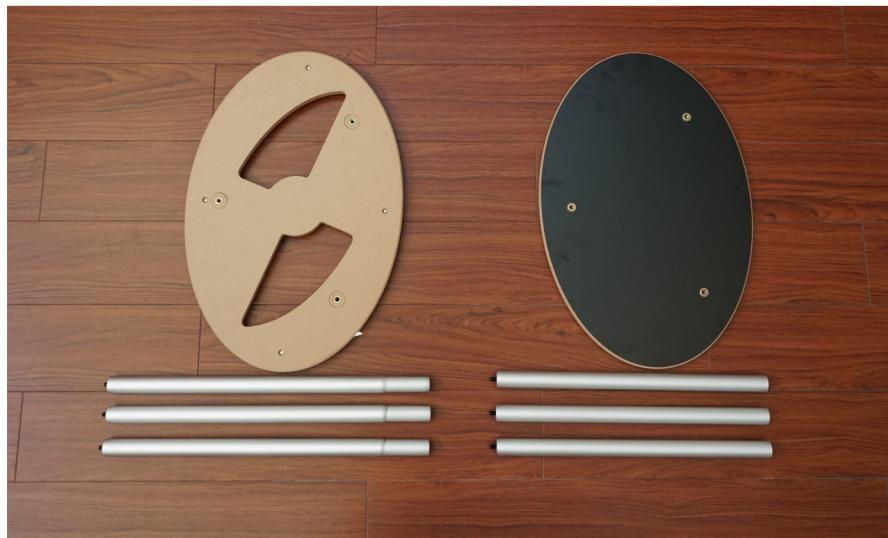

PORTABLE COUNTER SMALL OVAL

HARDWARE & INSTALLATION INSTRUCTIONS CONTINUED



STEP 1

- Turn the 23.5" wide oval countertop upside down on a flat surface.
- Locate the cylinder Leg piece with the screw and align one top pole piece with a "corner" hole.



STEP 3

- Repeat for all three poles.

STEP 2

- Twist the pole clockwise to screw it securely into the corner insert.



STEP 4

- Place the 15.5" wide base panel on the floor with the pole receptacles facing up.
- Repeat the same process as Step 2.



STEP 5


- Lower the countertop with attached legs onto the base, guiding each leg into the three countertop poles.
- Press down until all legs are seated securely to the base.

STEP 6

- Lift the counter carefully and turn it upright.
- Your Small Oval Portable Counter is now fully assembled and ready to use.

PORTABLE COUNTER SMALL OVAL

HARDWARE & INSTALLATION INSTRUCTIONS CONTINUED

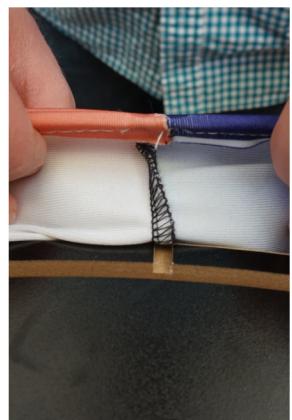


STEP 1

- Hold the sleeve right side up, with the graphic facing outward
- Slide it down over the top of the frame.

STEP 2

- Press the vertical stitched seam into the channel on the countertop and base pieces

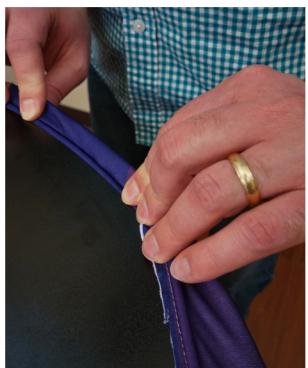

STEP 3

- Work around the entire base, pushing the silicone beading fully into the edge groove.
- Smooth the fabric tight as you go to remove wrinkles.

STEP 4

- Pull the remaining fabric evenly all the way around the counter.
- Make sure the graphic is centered and straight.



STEP 5

- Finish seating the beading around the base panel.
- Double-check that all edges are fully pressed into the channel.

STEP 6

- Carefully flip the counter upright.
- Make final graphic alignment adjustments.